




## CTRONICS Devices Email Alert Setting

Please set email via : Mian Menu-Setting-SYSTEM-Netservice-Email. Please note the email server only support Gmail, doesn't support Yahoo,Hotmail.

1,Install CMS in your PC, make the device online,then right click the screen, choose EMAIL.

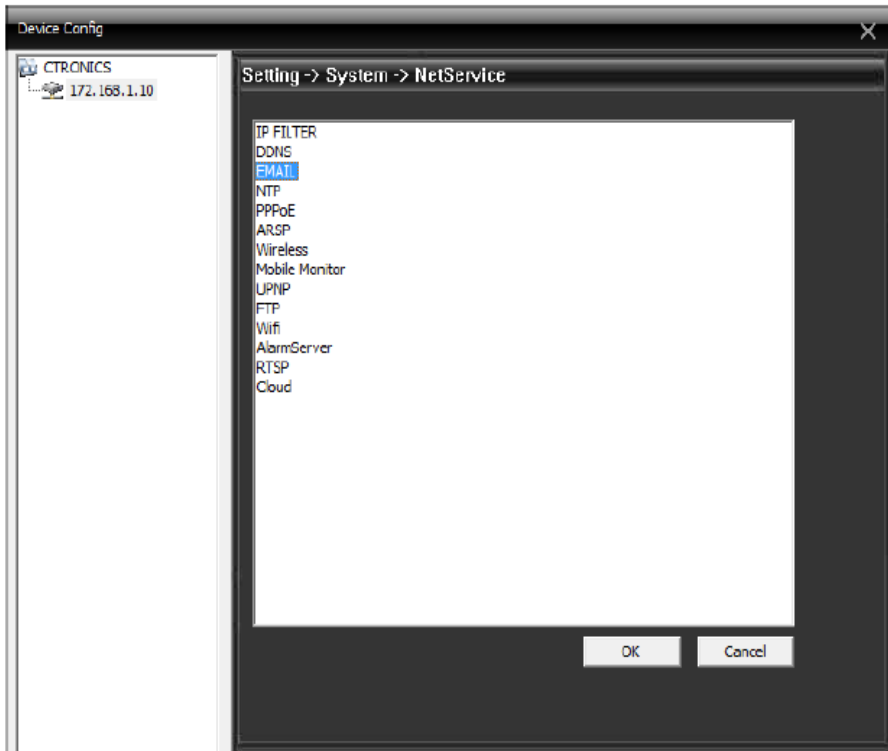

2,Set the email


The 'EMAIL' configuration dialog box includes the following fields and annotations:

- Enable:**
- SMTP Server:** Your SMTP Server
- Port:** 25
- Need SSL:**
- User Name:** Your user ID of Email
- Password:** Your Password of Email
- Sender:** Your Email Address
- Receiver:** Your Email Address
- Title:** Alarm Message

Red arrows point from a blue-bordered box containing the text 'can be same' to the 'Sender' and 'Receiver' fields.

Buttons: OK, Cancel

### 3,Set the Snapshot

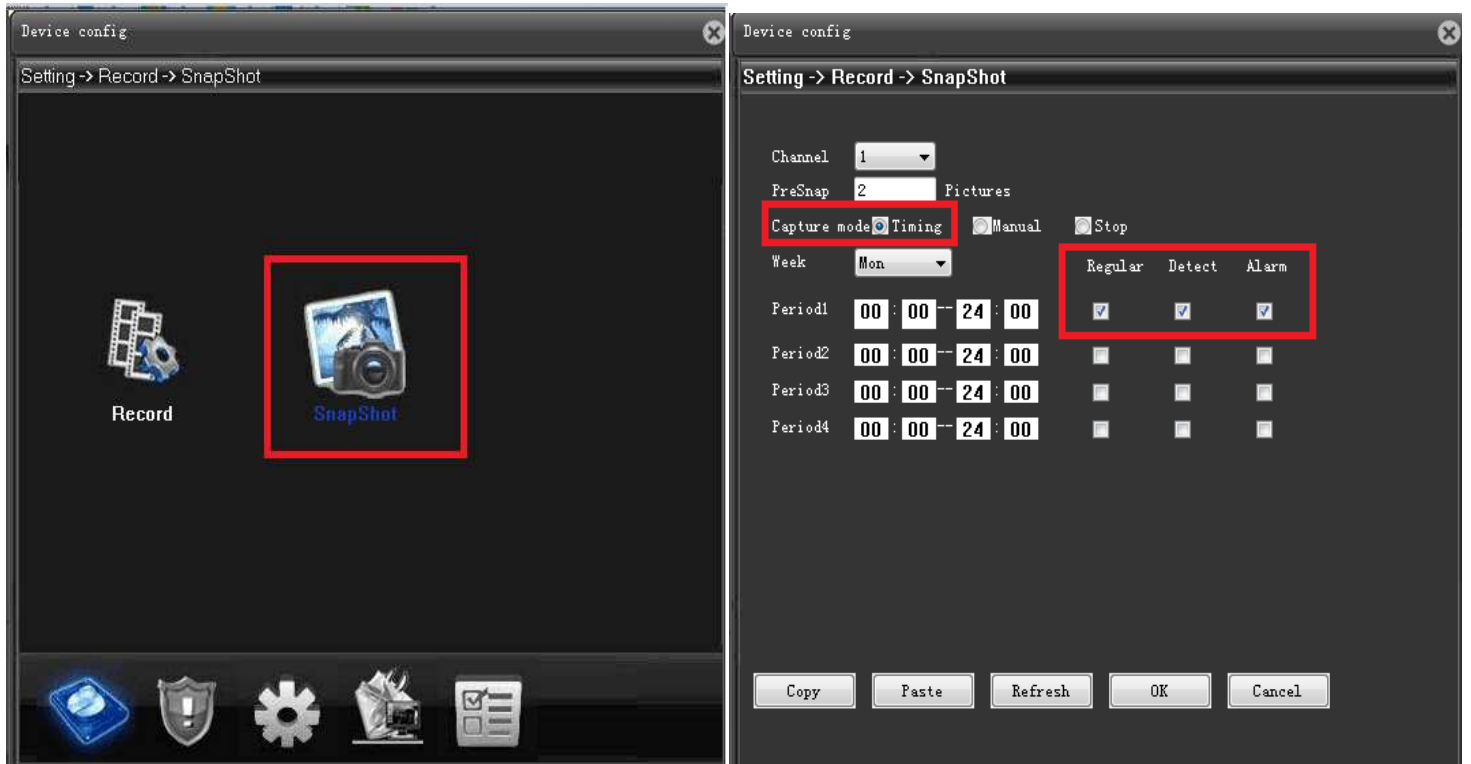

Choose Setting-Record-Snapshot,click Capture Mode,choose the first line of Period, click Regular, Detect and Alarm

### 4,Set Video motion: Setting-Alarm-Video Motion,click Enable,Snapshot,Send Email

